

831
8310

Elbow fittings

Fix 831 and 8310

Used for inward-opening windows with bottom-hung sash.

Fix 8310 has a catch, which can be locked with a 3 mm Allen key.

Operation and features

Stops the sash in an open position decided by the length and position of the elbow fitting. Fits both right and left. When tilting the sash past the stop position, e.g. for cleaning, the catch is pushed free, which uncouples the elbow fitting from the sash fixture. On Fix 8310, the Allen screw must first be loosened with an Allen key.

Construction


- a) Restrictor.
- b) Frame fixture.
- c) Sash fixture.
- d) Catch.

Material

Stainless steel catch.
Other parts of galvanized steel.

Screw

Use no. 7 (3.8 mm) TFX/DIN 7997.

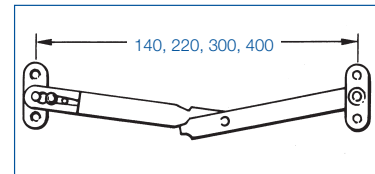

Standard lengths mm	Item no.	Item. no.	Milling measurements	
			A	B
140	831/140	8310/140	153	150
220	831/220	8310/220	193	190
300	831/300	8310/300	233	230
400	831/400	8310/400	283	280

